


Toyota Supra rear installation guide

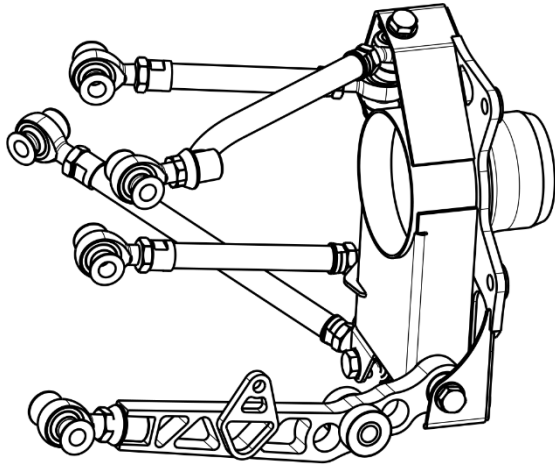

Overall view of assembled components in the right corner

All lengths are pre set by Wisefab.
No need to adjust before alignment.

Installing the shock mount arm



You can adjust motion ratio ride/roll stiffness by changing the coilover mounting point on arm.

Moving it outwards, ride/roll will be stiffer.

Moving it inwards, ride/roll will be softer.

There is also ARB mount on the arm.

When installing the arm ARB mount should face rearward of the car

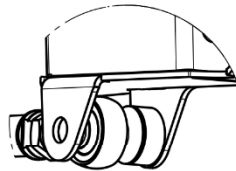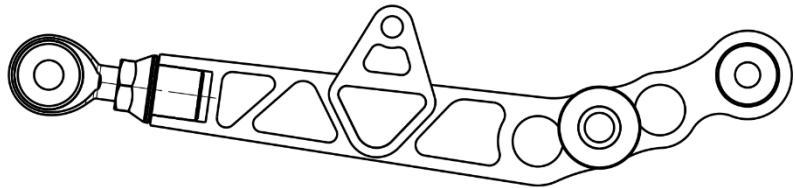


Installing the lower front arm

When installing the lower front control arm, make sure that the 10mm bushing is on the outside

Installing the upper arms

When installing the upper arms, this 10mm bushing must go between the arms

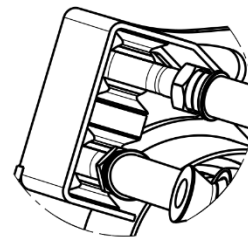

Recommended alignment specs

Camber: -0,5deg

Toe: 3-10mm toe in/per side



If you still have some trouble installing the kit, contact us at sales@wisefab.com, or call us +372 5562 5669